




DECO RENDER PASTE






Urban concrete finish



Fortress Deco Render Paste is a low VOC polymer modified plaster mix that can produce a range of wall finishes for residential and commercial applications. The Deco Render Paste uses lime and marble materials to provide even more flexibility in creating more textured finishes such as travertine, antique wood, marbling and venetian plaster. Complimented with our line of primers, waxes, sealers and colorants, Deco Render Paste is ready to use (RTU) and offers all the materials you will need for an environmentally friendly finish.

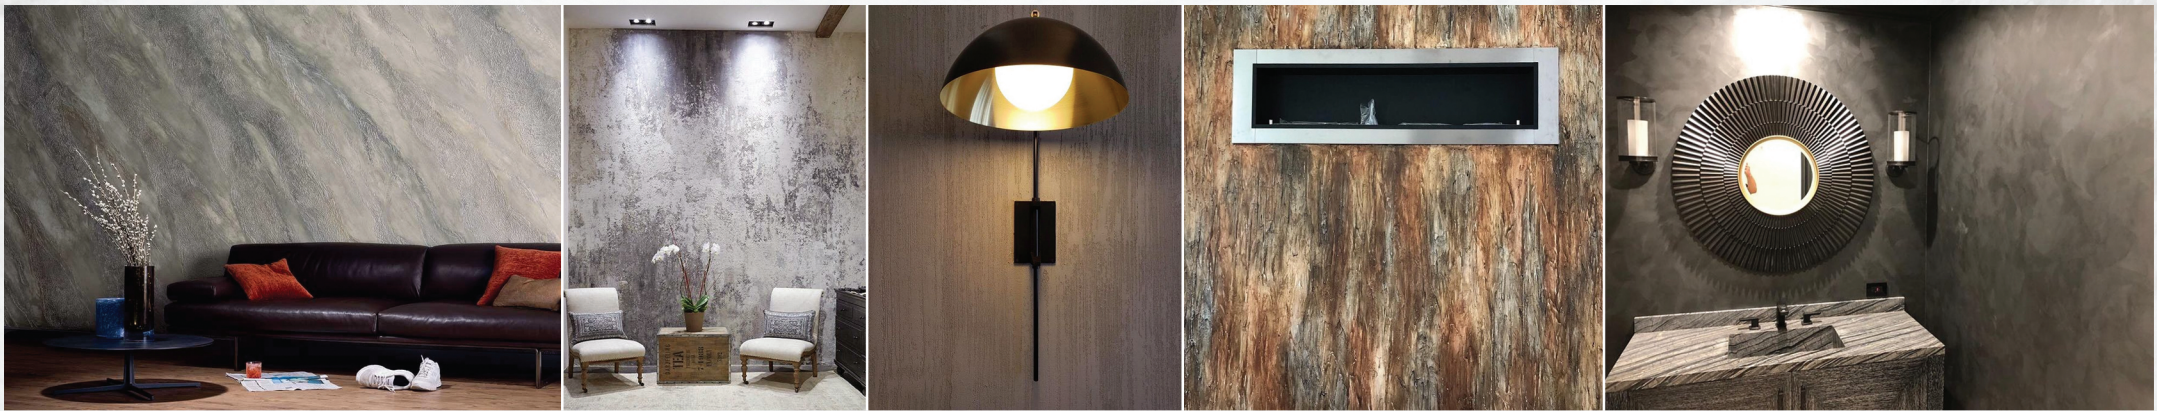


TEXTURES

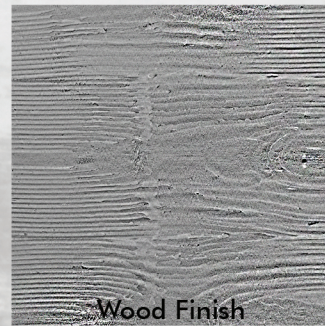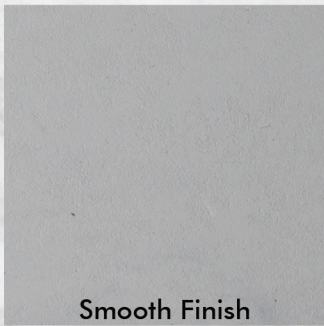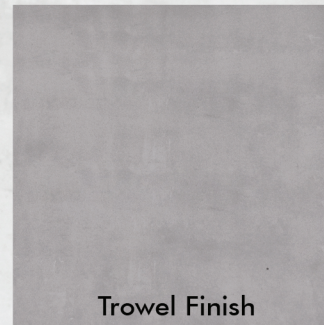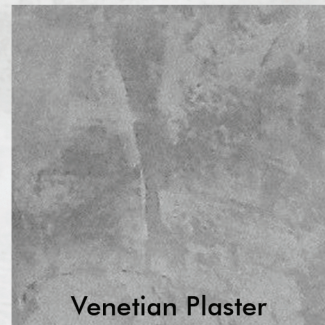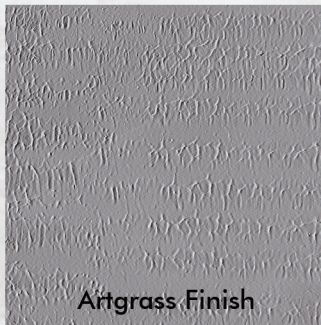

COLORANT



COLOR STAIN

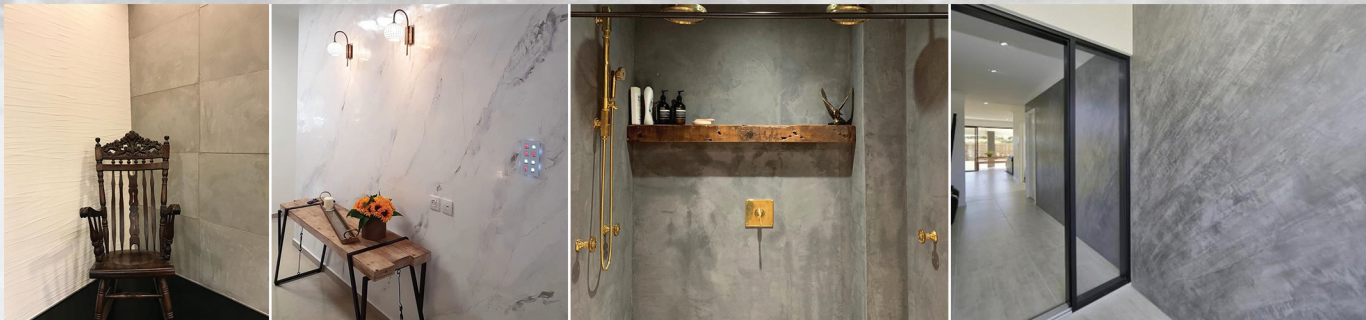

Colorants are added to the render during application while stains added topically to highlight or enhance your desired color finish.

DECO RENDER PASTE

Urban concrete finish

PREPARATION

- Surface should be smooth, clean and free of contamination.
- Tape, mask and cover adjacent surfaces to protect them from splatter.
- Interior new surface - Prime the substrate with PVA acrylic primer and let it dry completely.
- Next, apply one coat of diluted
- Deco Primer allowing it at least 3-5 hours to dry.

Interior & Exterior Existing Surface

- Patch and repair any damaged substrates.
- Lightly sand surfaces with any sheen, then prime them with multi-purpose primer and let it dry completely.
- Next, apply one coat of diluted Deco Primer allowing it at least 3-5 hours to dry.
- Preparation of smooth, flat surfaces requires only the application of diluted Deco Primer.

FOR BEST RESULT



DECO PRIMER | DECO RENDER COLORANTS | CONCRETE STAINS | NANO SEAL WB SEALER

APPLICATION



Brown Coat cure for at least seven (7) days before applying the finish coat. Twenty-one (21) days curing are recommended. Embedding a fiber mesh in the brown coat or the first coat may further reduce cracking. Use a stainless steel trowel or spatula to apply the two coats of Deco Render Paste.



First coat- Apply Deco Render Paste thinly and evenly, covering the entire wall. Using a wet sponge or a plastic float may create a more uniform texture.

Allow at least 12 hours for the first coat to dry.



Second coat (Stony Effect) – Apply the second coat using the same technique as the first coat. The second coat should be slightly thicker. Spread the material evenly maintaining the same thickness across the wall. Roll a “PIT” rubber roller across the wet plaster to create small holes in the surface. Work in sections of 1-2 square feet. Don’t let the material dry. After the material to set-up for 5-10 minutes, go back over the same sections, smoothing some parts and leaving patchy areas of texture in other parts. Textured areas will appear larger and rougher when the material has set up completely.



Second coat (Rocky Effect) – Apply the second coat using the same technique as the first coat. The second coat should be slightly thicker. Spread the material evenly maintaining the same thickness across the wall. Immediately after applying the plaster, “pat” the plaster onto the wall with the trowel, “pulling” at the thick coat you just applied. This creates the rough texture.



LIMITED WARRANTY

FORTRESS DECO RENDER is covered from the date of purchase when used on substrate which conforms to local building codes and when installed, in accordance with the manufacturer’s instruction. FORTRESS DECO RENDER will replace those which are determined to be defective. This warranty is limited to the original purchaser and may not be transferred to any subsequent owner. This warranty does not cover damage resulting from: settlement of the building or other wall movement, mixing with other chemicals or additives and prolonged exposure to heat and other irregular temperature. This warranty covers only manufacturing defects in FORTRESS DECO RENDER. It will not cover labor costs or damages obtained from removal and replacement of defective products.

FORTRESS®

ADMIXTURES AND SEALERS

ACTUAL COLORS MAY VARY FROM BROCHURE

FOR PROFESSIONAL USE ONLY